

Setting Up Time Delay

Why?: When using a tripod, the camera moves slightly when you press the shutter button; by setting up a delay, the camera will return to its original position before the photo is taken.

1. With the camera on and ready to take a photo, press the trashcan/timer icon. (Fig A)
2. Press over to select the icon with 2 on it, press the 'set' button. (Fig B)
3. Press the shutter button.
4. You will hear two beeps then the camera will take a photo.

Fig A

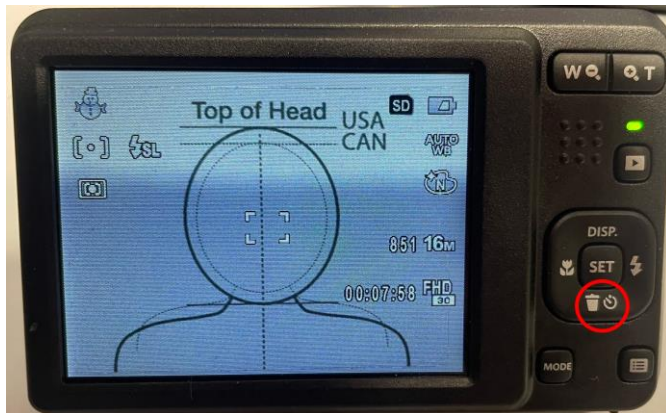


Fig B

